


KAON Voice Classic Remote Guide

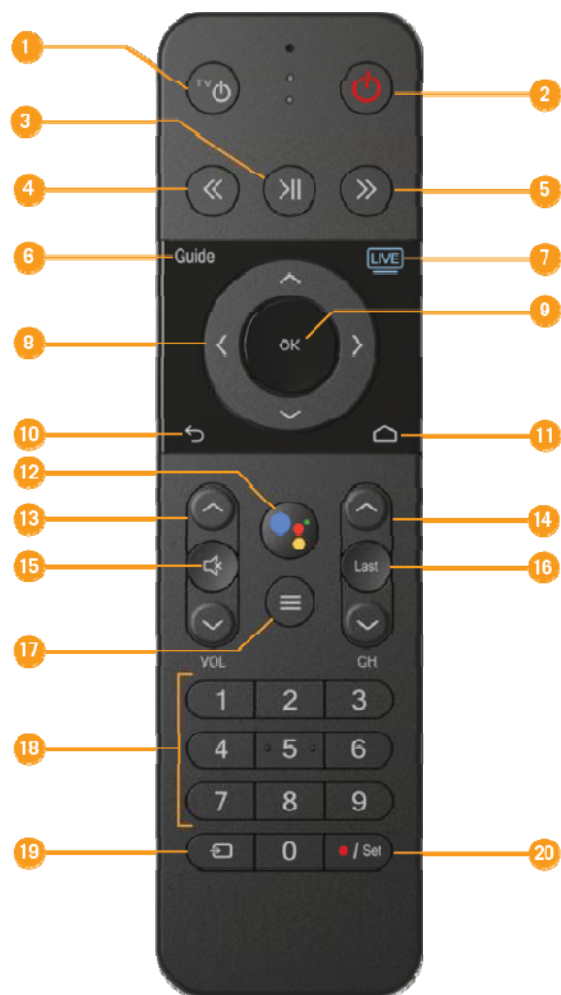

1	TV POWER	Powers or turns off TV
2	POWER	Switches set-top box power on or into Stand-By Mode.
3	PAUSE/PLAY	Plays or Pause toggle of VOD, LIVE TV or OTT
4	REWIND	Fast rewinds VOD, LIVE TV or OTT.
5	FAST FORWARD	Fast forwards VOD, LIVE TV or OTT
6	GUIDE	Launches the CHANNEL GUIDE (EPG) within the PayTV App. Supports a context Switch into the PayTV app.
7	LIVE TV	Tunes to the last content viewed in PayTV App.
8	ARROWS	Moves to highlight items in respective direction. Arrow keys have special OTT functions within the PayTV app.
9	OK / SELECT	Confirms a selection. When watching video in the PayTV App, the Metadata Information on the current video playing is brought up.
10	BACK / EXIT	Returns to previous menu or state within current App.
11	GOOGLE/HOME	Launches GOOGLE HOME. Context switch away from current App.
12	VOICE / SEARCH*	This key transmits a Search key code before sending voice stream to the STB. Press and release to enter a voice command.
13	VOLUME (Up or Down)	Increases or decreases volume levels on your audio device.
14	CHANNEL (Up or Down)	Selects the previous and next available channels. (Hold for rapid advance.) Within Menus or Grid Guide, acts the same as Page Up/Page Down.
15	MUTE	Mutes the audio on your audio device (TV, Sound Bar or AVR)
16	LAST	(Short button press or Long press) Short button press: Displays the "Recently Watched" or "Last Channel (or Asset) Viewed." Supports a context Switch into PayTV app. Long button press: Switches between the current and last channel viewed.
17	MENU	Launches the MAIN MENU within the PayTV app, with Live Video.
18	0-9	Enters channel numbers in the GUIDE or FULLSCREEN VIDEO.
19	TV INPUT	Changes video input on TV
20	RECORD/ RCU SETUP	Begin recording selected content in the PayTV App. Setup the remote control to control the TV + Program an audio device.